


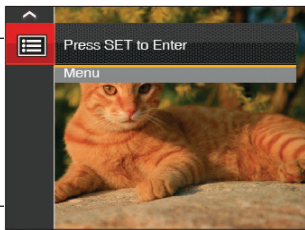

KODAK PIXPRO

DIGITAL CAMERAS

Firmware Update Instructions

- 1 Format your SD card then power off the camera.
(**Note:** Formatting will erase all files permanently.)
- 2 Connect your camera via USB cable to your computer.
- 3 Download the zip file and extract the .bin file to your formatted SD card.
- 4 Turn off the camera and unplug it from the USB cable.
- 5 Turn on the camera.



- 6 Press the Menu  button, scroll up/down to select the  icon. Press **SET** to enter.



- 7 Select the  icon and enter the FW Version menu.

- 8 Select Yes and press **SET** to upgrade.

